


# Magneti Marelli Dinoplex AEC 101D Ferrari Dino 206 Wiring, '68 Europe

V 1.0 12/2010, Copyright www.dinoplex.org, info@dinoplex.org

This wiring diagram applies to the Ferrari 206GT Dino

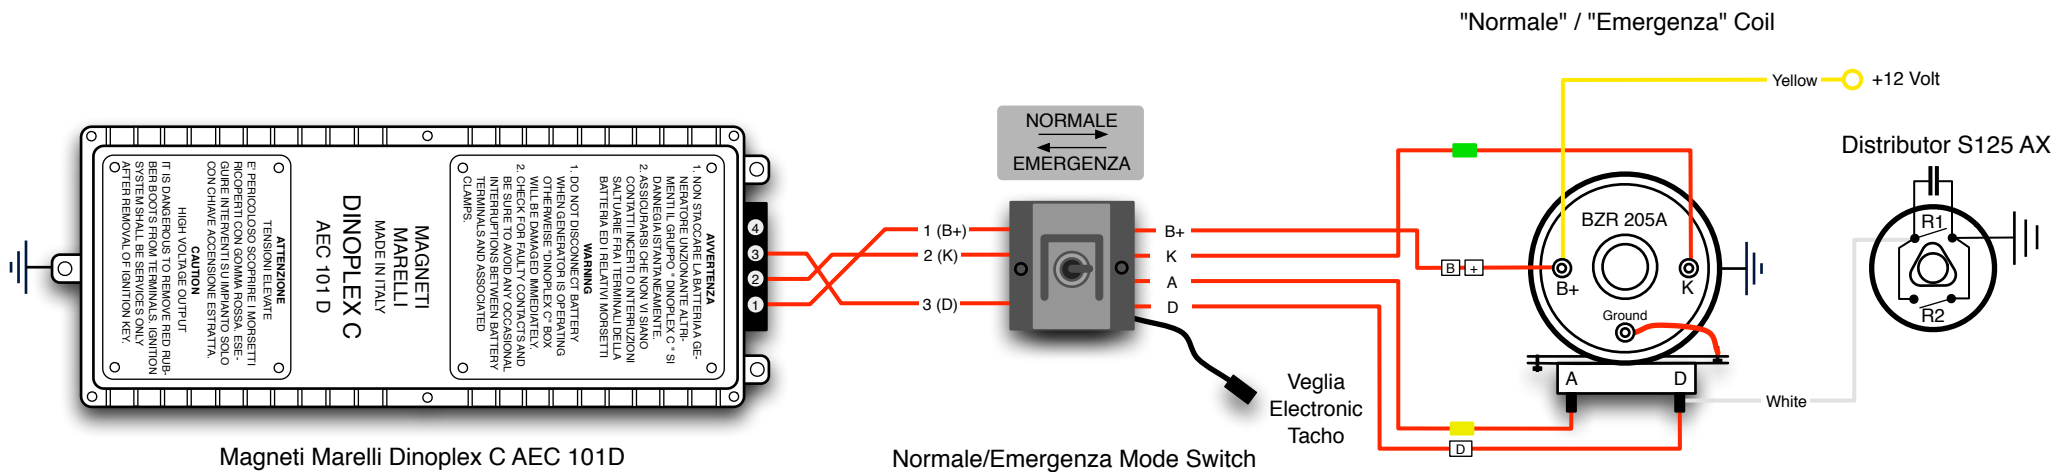

## Dinoplex C AEC101D Wires to Switch

1. 'B+' +12V from ignition key, red wire
2. 'K' to ignition coil terminal 'K', red wire
3. 'D' from distributor points R1, red wire
4. to Veglia tachometer, red wire

## Dinoplex C AEC101D Switch to Car

1. 'B+' +12V from ignition key and coil terminal B+, red wire with white wire markers
2. 'K' to ignition coil terminal 'K', red wire with green wire marker
3. 'A' to ballast resistor terminal 'A', red wire with yellow wire marker
4. 'D' from distributor points R1, red wire with white wire marker
5. to Veglia tachometer, black wire