
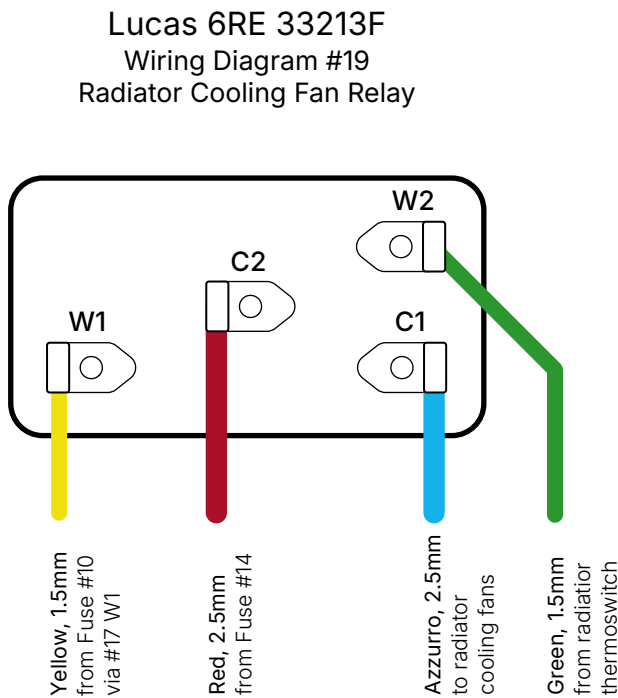
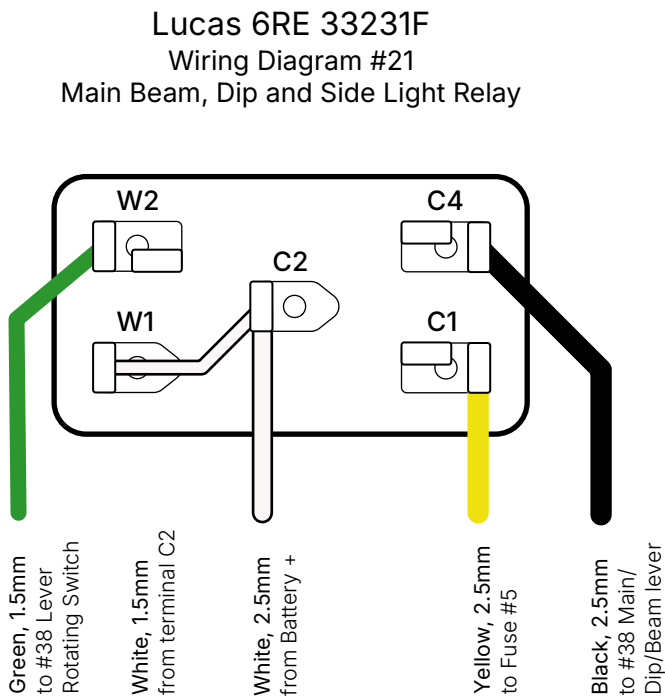


Ferrari Dino 246 GT (1970)
E-Series Relays Wiring Diagram

- Left-Hand-Drive Car, Italian Delivery
- Connector Housings are shown from the bottom side while being mounted to the relay board
- Terminals: Wn = Relay Coil, Cn = Switch

Copyright © 2026 www.dinoplex.org, Adrian Le Hanne
V1.2 072026
Licensed under CC BY-SA 4.0. Free use, modification, and redistribution are permitted, including commercially, provided attribution is maintained and modifications are clearly identified.

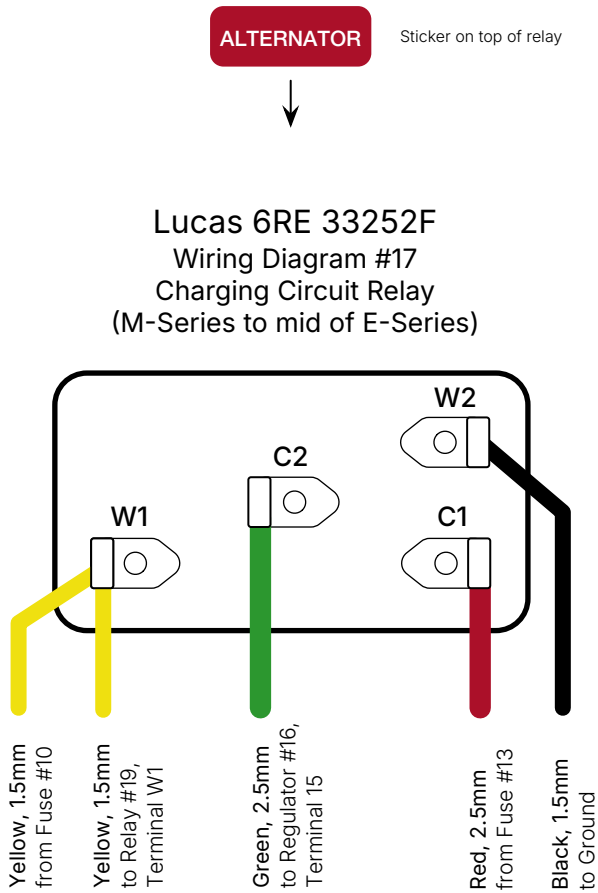

FIAMM 12V Relay
Wiring Diagram #20
Horn Compressor Relay

